



HONDA CBR600 09-12' Upper Graphic Kit


EASY INSTALLATION INSTRUCTIONS:

For best results, remove all existing stickers on any surface areas wherever your new Factory Effex graphic kit will be applied.


1. Be sure to clean all oil, waxes, or fuel residue from all areas where graphics will be applied. Use a clean cloth and contact cleaner or rubbing alcohol. Be sure to let any cleaners completely dry before application of any graphics.
2. Choose a graphic piece from the sheets and reference the number next to it. Use the diagram below to find its correct location on your bike by matching the number.
3. Install at room temperature to make application easy. Remove the backing on graphic, line up with correct location on bike and gently apply. Start at the center edge and work your way out until all air bubbles have been pushed out. Once installed, firmly press all edges to ensure long lasting adhesion.

Be sure to visit Factoryeffex.com for video installation tips and to see the complete line of FX sport bike and off-road products.

LEFT SIDE

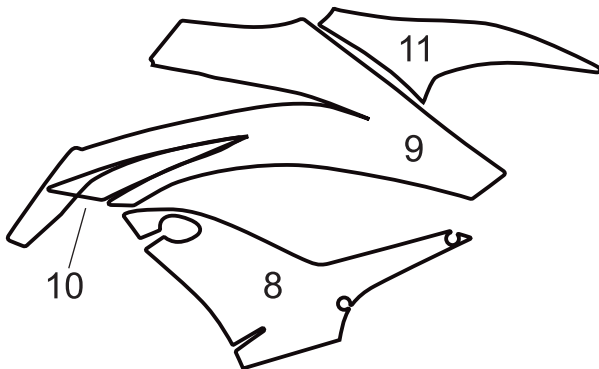

NOSE

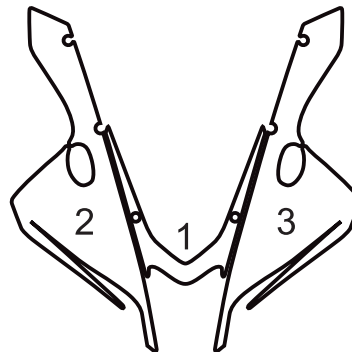

RIGHT SIDE

