



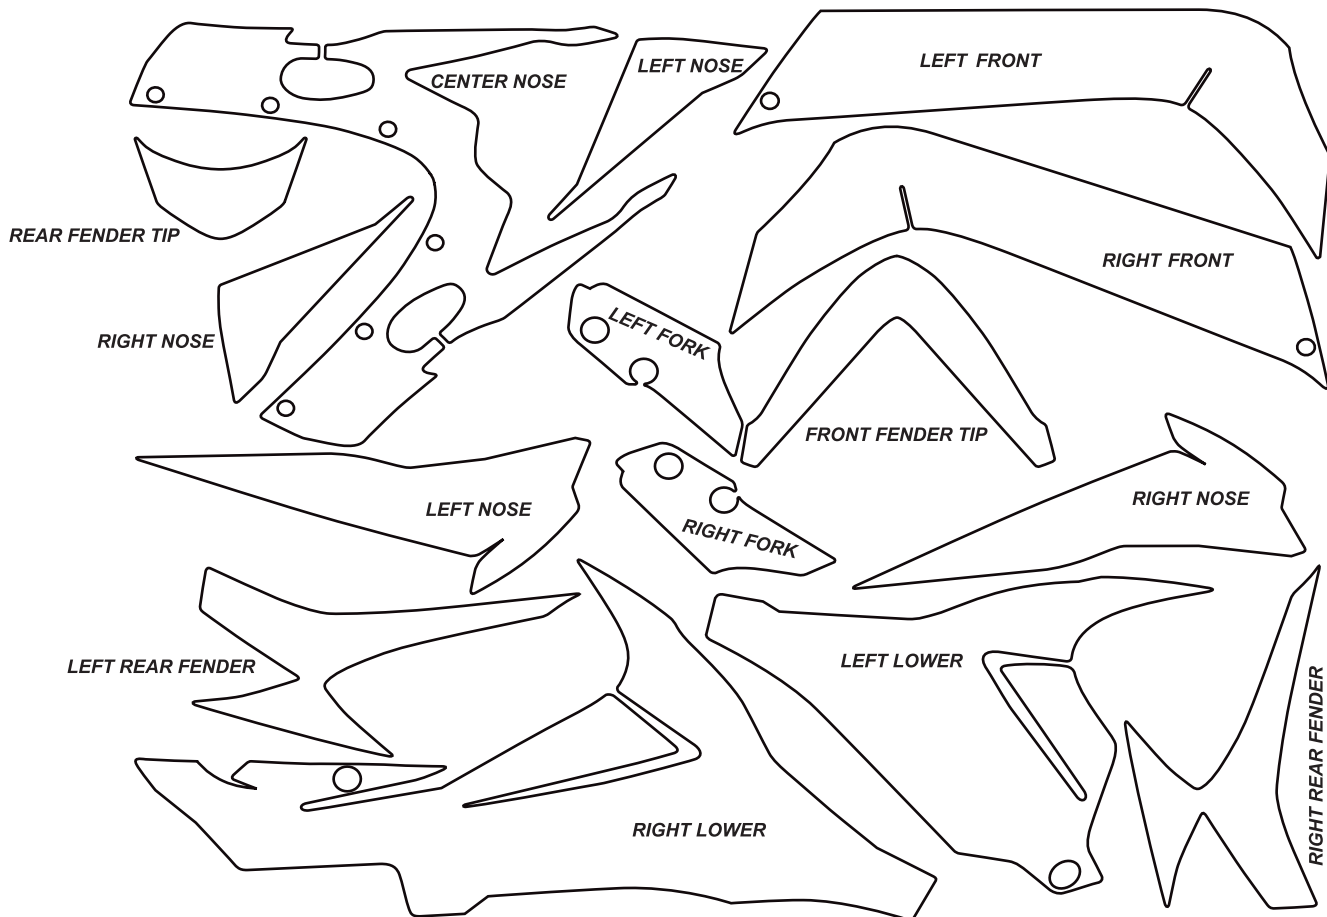

# SUZUKI GSXR600/750 11-12' CLEAR PROTECTOR KIT

## EASY INSTALLATION INSTRUCTIONS:

1. Be sure to clean all oil, waxes, or fuel residue from all areas where graphics will be applied. Use a clean cloth and contact cleaner or rubbing alcohol. Be sure to let any cleaners completely dry before application of any clear protector pieces. Install at room temperature to make application easy.
2. Choose a clear protector piece from the sheet and find its correct location on your bike referring to the diagram below.
3. Remove from the sheet and line up with correct location on bike, gently press starting at the center and work your way out until all air bubbles have been pushed out. Once installed, firmly press all edges to ensure long lasting adhesion.

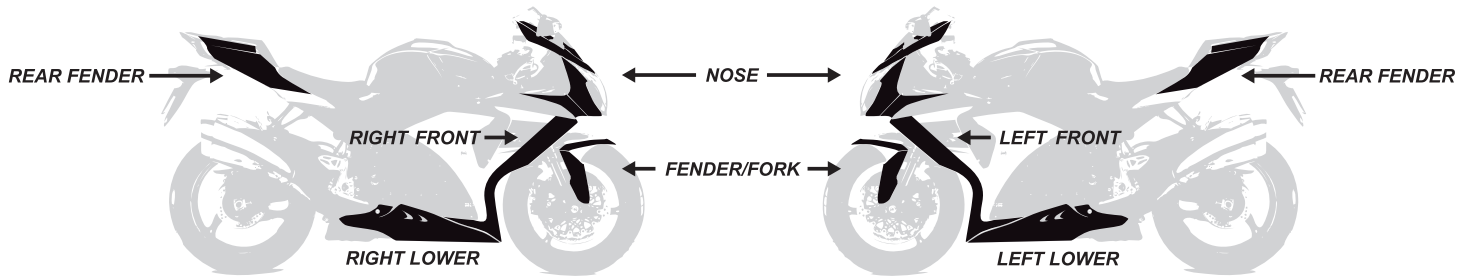

Be sure to visit [Factoryeffex.com](http://Factoryeffex.com) for video installation tips and to see the complete line of FX sport bike and off-road products.